

FINLUX

happy Finnish

32in LCD TV

32F502



Owner's manual

Customer Helpline Number: 0845 459 5282

Contents

Environmental Information	2
Accessories included	3
TV - Features	3
Safety Precautions and Important Information	3
Viewing the TV	4
TV Control Buttons & Operation	4
Operation with the Buttons on the TV	4
Operation with the Remote Control	4
Remote Control	5
Inserting the Batteries into the Remote Control	7
Connect Power & Antenna	7
Switching On/Off	7
First Time Installation	7
Media Playback via USB Input	8
Quick Menu	9
Changing Image Size: Picture Formats	9
Using the Channel List	9
Menu Features and Functions	10
Electronic Programme Guide (EPG)	13
Recording a Programme	13
Timeshift Recording	14
Instant Recording	14
Watching Recorded Programmes	14
Recording Configuration	14
Product Safety	14
Digital Teletext	15
Software Upgrade	15
Troubleshooting & Tips	15
Licence Notifications	15
Appendix A: PC Input Typical Display Modes	16
Appendix B: AV and HDMI Signal Compatibility (Input Signal Types)	16
Appendix C: Supported File Formats for USB Media Browser	17
Appendix D: Supported DVI Resolutions	18
SKY Remote Control Code	18
Specifications	18

Power cord and plug

- The power cord plug should be easily accessible. If there is lightning or storms, or if the TV is not going to be used for a while (e.g. if going away on holiday), disconnect the TV set from the mains.
- **Do not** place the TV, furniture, etc. on the power cord or pinch the cord.
- Handle the power cord by the plug, **do not** unplug the TV by pulling the power cord.
- Never touch the power cord/plug with wet hands as this could cause a short circuit or electric shock.
- Never make a knot in the power cord or tie it with other cords.
- Power cords should be placed in such a way that they are not likely to be stepped on or provide a trip hazard.
- A damaged power cord/plug can cause fire or give you an electric shock. When damaged it must be replaced, this should only be done by qualified personnel.

Moisture and Water

- **Do not** use this TV in a humid or damp place (avoid using in the bathroom or near the kitchen sink)
- **Do not** expose this TV to rain or water, as this may be dangerous.
- If any solid object or liquid falls into the cabinet, unplug the TV and have it checked by qualified personnel before operating it any further.

Ventilation

- The slots and openings on the TV set are intended for ventilation and to ensure reliable operation.
- To prevent overheating, these openings must not be blocked or covered in any way.

Heat sources and Flames

- Do not expose the TV to direct sunlight or other heat sources.
- The TV should not be placed near open flames or sources of intense heat such as an electric heater.
- Ensure that no open flame sources, such as lit candles, are placed on top of the TV.

Headphone Volume

- Excessive sound pressure from earphones and headphones can cause hearing loss, please take care.

Wall Mounting (optional)

- To prevent injury, this TV must be securely attached to the wall in accordance with the installation instructions.

Screen

- Occasionally, a few non-active pixels may appear on the screen as a fixed blue, green or red point. Please note that this does not affect the performance of your product.
- Take care not to scratch the screen with fingernails or other hard objects.

Cleaning

- Before cleaning, unplug the TV from the wall socket.
- **Do not** use liquid or aerosol cleaners. Only use a soft, dry cloth.

Environmental Information

This television is designed to consume less energy to help save the environment. You can not only help to save the environment but you can also save money by reducing your electricity bills thanks to the energy efficiency features of this TV. To reduce energy consumption, you should take the following steps:

You can use the Power Save Mode setting, located in the Picture menu. If you set the Power Save Mode as Eco, the TV will switch to energy-saving mode and the luminance level of TV set will be decreased to the optimum level. Note that some picture settings will be unavailable to be changed when the TV is in Power Save Mode.

If Picture Off is selected, "Screen will be off in 15 seconds." message will be displayed on the screen. Select PROCEED and press OK to continue. The screen will be off in 15 seconds.



When the TV is not in use, please switch off or disconnect the TV from the mains plug. This will also reduce energy consumption.

It is highly recommended that you activate the Power Save Mode setting to reduce your annual power consumption.

1) If the TV does not receive any input signal (e.g. from an aerial or HDMI source) for 5 minutes, the TV will go into standby. When you next switch-on, the following message will be displayed:

"Standby Cause No Signal"

Press OK to continue.

2) If the TV has been left on and not been operated for 4 hours, the TV will go into standby. When you next switch-on, the following message will be displayed:

"Standby Cause No Operation"

Press OK to continue.

Accessories included

Remote Control

Batteries: 2 x AAA

Instruction Book

TV - Features

- Remote controlled colour LCD TV
- Fully integrated digital tuner
- HDMI Inputs are for connecting a device that has a HDMI socket
- USB input
- 10000 programmes
- OSD menu system
- Scart socket for external devices (such as DVD Players, PVR, video games, etc.)
- Stereo sound system
- Teletext
- Headphone connection
- Automatic programming system
- Manual tuning
- Automatic power down after up to six hours
- Sleep timer
- Child lock
- Automatic sound mute when no transmission
- NTSC playback
- AVL (Automatic Volume Limiting)
- PLL (Frequency Search)
- PC input
- Plug&Play for Windows 98, ME, 2000, XP, Vista, Windows 7
- Game Mode (optional)

Safety Precautions and Important Information



Please read these instructions fully before installing or operating.

Preparation

Place the device on a solid even surface. For ventilation purposes, leave a free space of at least 10 cm all around the set. Do not place any objects on top of the set. Use this device in moderate climates. Operation temperature and operation humidity: 5°C up to 45°C, 85% humidity max. Note: Don't block ventilation holes.

Intended Use

This device is used to receive and display TV programmes. The different connection options expand the reception and display sources possible (various external devices). This device is only suitable for operation in dry interiors. This appliance is intended solely for private domestic use and may not be used for industrial and commercial purposes. We exclude liability in principle, if the device is not used as intended, or unauthorized modifications have been made. To operate your TV in extreme ambient conditions may cause damage to the device.

⚠ WARNING: Never let people (including children) with reduced physical, sensory or mental capabilities or lack of experience and / or knowledge use electrical devices unsupervised.

Children may not recognize the dangers of incorrect use. The swallowing of batteries can be fatal. Keep batteries out of reach of small children. If a battery is swallowed, immediately seek medical attention. Keep the packaging films out of reach of children to prevent the risk of suffocation.



Power source

- The TV should be operated only from a 220-240 V AC, 50 Hz outlet.


Positioning the TV

- For ventilation, please leave a clear space of at least 10cm all around the TV.
- **Do not** block the ventilation openings.
- **Do not** place the TV on sloping or unstable surfaces, the TV may tip over.
- To prevent damage to the TV, **do not** place any objects on top of the TV.

Viewing the TV

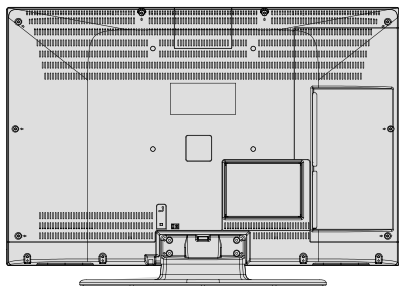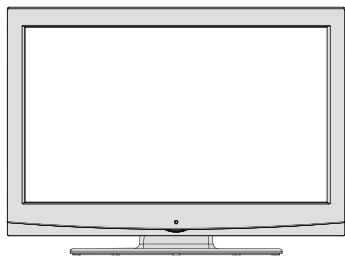



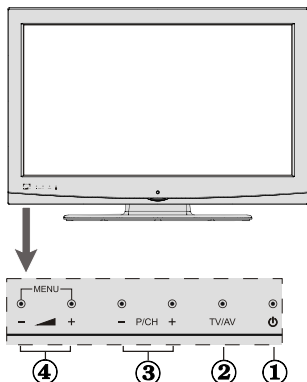



TV Control Buttons & Operation



1. Standby On/Off button
2. TV/AV button
3. Programme Up/Down buttons
4. Volume Up/Down buttons

Operation with the Buttons on the TV

 
Press **-**  button to decrease the volume or  **+** button to increase the volume, so a volume level scale (slider) will be displayed on the screen. Press **P/CH +** button to select the next programme or **P/CH -** button to select the previous programme.

Press the **-**  or  **+** button at the same time to view the main menu. In the Main menu select a sub-menu using **TV/AV** button and set the sub-menu using **-**  or  **+** buttons. To see what options are available via the menu, refer to the menu system section of this manual. Press the **TV/AV** button in the control panel on the TV to switch between AV modes.

Operation with the Remote Control

Press the **MENU** button on your remote control to display the main menu screen. Use the "**◀**" or "**▶**" buttons to select a menu tab and press the **OK** button to select option. Use the "**◀**" / "**▶**" or "**▼**" / "**▲**" buttons to select or set an item. Press **BACK** or **EXIT** or **MENU** button to quit a menu screen.

Input Selection

Once you have connected external systems to your TV, you can switch to different input sources. Press the " - (**SOURCE**)" button on your remote control consecutively to select the different inputs.

Changing Channels and Volume

You can change the channel and adjust the volume using the **V+/-** and **P+/-** buttons on the remote. You can also change the channels by pressing the buttons on the front panel of your TV.

Remote Control


1. Standby / On
2. Channel list
3. Volume up-down
4. Menu on/off
5. OK / Channel list / Confirm
6. Return / Back
7. No function
8. My button 1 (*)
9. My button 2 (**)
10. Coloured buttons (Red, Green, Yellow, Blue)
11. Mono-Stereo Dual I-II / Current language
12. Fast rewind (in media browser mode)
13. Pause (in media browser mode) / Timeshift recording
14. Programme recording
15. Play (in media browser mode)
16. Stop (in media browser mode)
17. Fast forward (in media browser mode)
18. Subtitle on-off / Subtitle (in media browser mode)
19. Image size
20. Teletext - Mix
21. Media Browser
22. Electronic programme guide
23. Exit
24. Navigation buttons
25. Quick menu
26. Info / Reveal (in TXT mode)
27. Programme up/down
28. Mute
29. Previous programme / Now (in EPG mode)
30. Numeric buttons
31. AV / Source

 **NOTE:** The Remote Control range is approximately 7m / 23ft.

Using My button 1 (*)

Press MY BUTTON 1 for five seconds when on a desired source, channel or link, until the "MY BUTTON IS SET" message is displayed on the screen. This confirms that the selected MY BUTTON is now associated with the selected function.

Note that if you perform first time installation, MY BUTTON 1 will return to its default function.

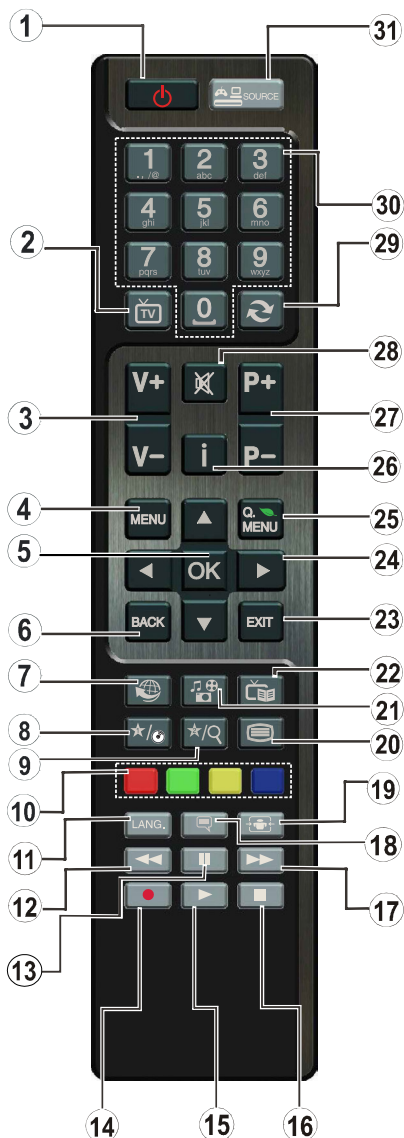

 



 


 

 



 


 
 



 



 

 






Using My Button 2 (**)

Press MY BUTTON 2 for five seconds when on a desired source, channel or link, until the "MY BUTTON IS SET" message is displayed on the screen. This confirms that the selected MY BUTTON is now associated with the selected function.

Note that if you perform a first time installation, MY BUTTON 2 will return to its default function.

Connections

Connector	Type	Cables	Device
	Scart Connection (back)		
	VGA Connection (back)		
	PC/YPbPr Audio Connection (back)		
	HDMI Connection (back & side)		
	S/PDIF Optical Out (back)		
	Side AV Connection (side)		
	Headphone Connection (side)		
	YPbPr Video Connection (back)		
	USB Connection (side)		
	CI Connection (side)		
	Subwoofer Connection (back)		

 **NOTE:** When connecting a device via the YPbPr or Side AV inputs, you must use the connection cables to enable connection(not supplied). See the illustrations above. | To enable PC audio, you will need to use an Audio cable(not supplied). | If an external device is connected via the SCART socket, the TV will automatically switch to AV mode.| When receiving DTV channels (Mpeg4 H.264) or while in Media Browser mode, output will not be available via the scart socket. | When using the wall mounting kit (optional), we recommend that you plug all your cables into the back of the TV before mounting on the wall. | Insert or remove the CI module only when the TV is SWITCHED OFF. You should refer to the module instruction manual for details of the settings.

 
Inserting the Batteries into the Remote Control

1. Lift the cover on the back of the remote upward gently.
2. Install two AAA batteries. Make sure to match the + and - ends of the batteries in the battery compartment (observe the correct polarity).
3. Replace the cover.



Connect Power & Antenna

IMPORTANT: The TV set is designed to operate on 220-240V AC, 50 Hz socket. After unpacking, allow the TV set to reach the ambient room temperature before you connect the set to the mains. Plug the aerial cable into the ANT socket on your TV.



Switching On/Off

To Switch the TV On

Connect the power cord to the 220-240V AC, 50 Hz.

To switch on the TV from standby mode either:

Press the “” button, **P+ / P-** or a numeric button on the remote control or press the “” touch button on the TV.

To Switch the TV Off


Press the “” button on the remote control or press the “” touch button on the TV. The TV will now switch to standby mode.

To power down the TV completely, unplug the power cord from the mains socket.


Note: When the TV is switched to standby mode, the standby LED can blink to indicate that features such as Standby Search, Over Air Download or Timer is active. The LED can also blink when you switch on the TV from standby mode.

First Time Installation

When turned on for the first time, the “language selection” menu appears. The message “**Welcome please select your language!**” is displayed and all language options are listed alphabetically.

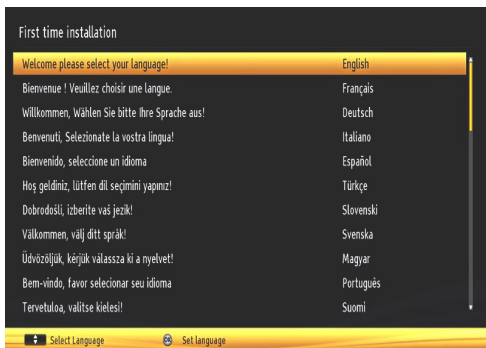


Press the “” or “” button to highlight the required language, press OK button to select. “First Time Installation” appears. Use “” or “” button to set the required country, and press “” button to select Search Type. Use “” or “” to set the desired search type. Available search types are digital and analog, digital only and analog only. When set, press “” to select Teletext Language. Use “” or “” button to set the “Teletext Language” and select “Scan Encrypted” using “” or “” button. You can set **Scan Encrypted** as **Yes** if you want to scan coded stations.

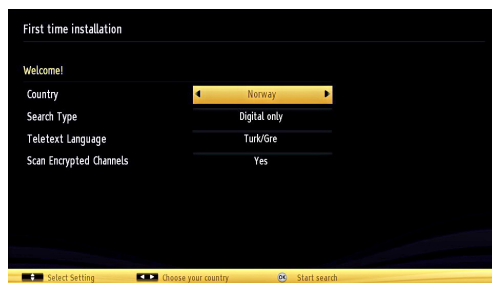

Default PIN code can change depending on the selected country. If you are asked to enter a PIN code for viewing a menu option, use one of the following codes: 4725, 0000 or 1234.


Press **OK** button on the remote control to continue and the following message will be displayed on the screen.

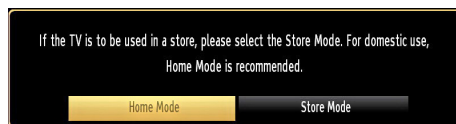


You can activate Store mode option by using “” or “” button. If Store Mode is selected, Store mode option will be available in “Other settings” menu and your TV’s settings will be optimized for best display quality. A confirmation screen will be displayed after selecting the Store Mode. Select **YES** to proceed.



 If Home Mode is selected, Store mode will not be available after the First Time Installation. Press **OK** button on the remote control to continue and the following message will be displayed on the screen.



You must select **YES** to search and store broadcasts. The television will search for digital terrestrial TV broadcasts.

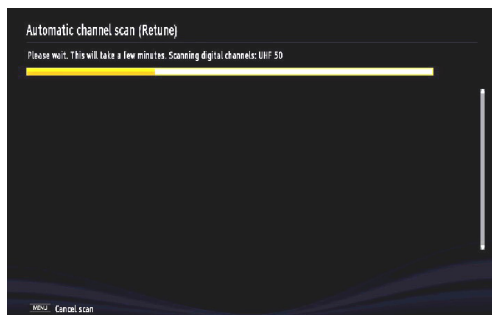

NOTE: You can press **MENU** button to cancel.

After all the available stations are stored, the Channel List will be displayed on the screen. If you are satisfied with the order of channels press the **OK** button to quit the channel list and watch TV.



Media Playback via USB Input

You can connect a USB hard disk drive or USB memory stick to your TV by using the USB inputs of the TV. This feature allows you to play files stored in a USB drive. 2.5" and 3.5" inch (hdd with external power supply) external hard disk drives are supported.

IMPORTANT! You should back up your files before making any connections to the TV set in order to avoid any possible data loss. The Manufacturer will not be responsible for any file damage or data loss. It is possible that certain types of USB devices (e.g. MP3 Players) or USB hard disk drives/memory sticks may not be compatible with this TV. The TV supports FAT32 and NTFS disk formatting but **recording will not be available with NTFS formatted disks**. Note: While formatting a USB hard disk that has 1TB (Tera Byte) or more file capacity, you can experience problems with the formatting process.


Quickly plugging and unplugging USB devices is a very hazardous operation. This may cause physical damage to the USB player and the USB device itself. Do not pull out the USB module while playing a file.

You can use USB hubs with your TV's USB inputs. External power supplied USB hubs are recommended in such a case.

It is recommended to use the TV's USB input(s) directly, if you are going to connect a USB hard disk.

Media Browser Menu

You can play photo, music, and movie files stored on a USB disk by connecting it to your TV. Connect a USB disk to one of the USB inputs located on the side of the TV.

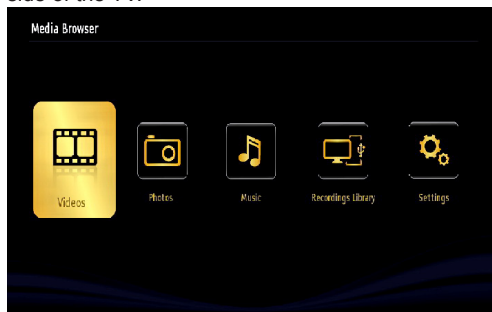

The USB selection OSD will be displayed on the screen. Press the **MENU** button and select the Media Browser tab by using the Left/Right and OK buttons. The Main media browser screen will be displayed. You can display the appropriate content by selecting the Video, Music or Picture tab. Follow the button indications under each on screen menu for media playback features.

Pressing the **MENU** button while in the Media Browser mode will access the Picture, Sound and Settings menu

options. Pressing the **MENU** button again will exit from this screen.

You can set your Media Browser preferences by using the Settings menu.




Note: If two USB devices are connected to the TV at the same time, the first USB device connected to the TV will be named USB drive 1. Select the drive by using "▼" or "▲" buttons and press OK.

Quick Menu

The Quick Settings menu allows you to access some options quickly. This menu includes **Power Save Mode**, **Picture Mode**, **Equalizer Settings**, **Favourites** and **Sleep Timer** options.

Press **Q.MENU** button on the remote control to view the quick menu. See the following chapters for details of the listed features.

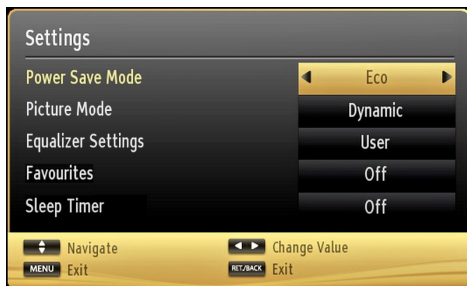

Changing Image Size: Picture Formats

Programmes can be watched in different picture formats, depending on the transmission received. You can change the aspect ratio (image size) of the TV for viewing the picture in different zoom modes. Press the "SCREEN" button repeatedly to change the image size. **You can shift the screen up or down by using "▼" or "▲" buttons while in 14:9 Zoom, Cinema or Subtitle.**

Using the Channel List



The TV sorts all stored stations in the Channel List. You can edit this channel list, set favourites or set active stations to be listed by using the Channel List options. Press the **MENU** button to view the main menu. Select the Channel List item by using **Left** or **Right** button. Press **OK** to view menu contents. Select **Edit Channel List** to manage all stored channels. Use **Up** or **Down** and **OK** buttons to select **Edit Channel List**. Press the **Up** or **Down** button to select the channel that will be processed. Press the **Left** or **Right** button to select a function on the Channel List menu. Use **P+/P-** buttons to move page up or down. Press **MENU** button to exit.

Sorting Channel List

You can select which broadcasts will be listed in the channel list. To display specific types of broadcast, you should use the Active channel list setting. Select the Active channel list from the Channel list menu by using "▼" or "▲" button. Press the OK button to continue. You can select a network type option from the list by using "◀" or "▶" and OK buttons.

Menu Features and Functions

Picture Menu Contents	
Mode	You can change the picture mode to suit your preference or requirements. The Picture mode can be set to one of these options: Cinema, Game, Sport, Dynamic and Natural .
Contrast	Sets the lightness and darkness values of the screen.
Brightness	Sets the brightness value for the screen.
Sharpness	Sets the sharpness value for the objects displayed on the screen.
Colour	Sets the colour value, adjusting the colors.
Power Save Mode	To set the Power Save Mode as Eco, Picture Off and Disabled. See the section, "Environmental Information" in this manual for further information on the Power Save Mode. If Picture Off is selected, "Screen will be off in 15 seconds" message will be displayed on the screen. Select PROCEED and press OK to continue. The screen will be off in 15 seconds. If you disable Power Save Mode, Picture mode will be automatically set to Dynamic.
Backlight (optional)	This setting controls the backlight level and it can be set to Auto, Maximum, Minimum or Eco Mode . <i>The Backlight function will be inactive if the Power Save Mode is set to On. The Backlight cannot be activated in VGA, Media Browser mode or while the picture mode is set to Game.</i>
Noise Reduction	If the broadcast signal is weak and the picture is noisy, use the Noise Reduction setting to reduce the amount of noise. Noise Reduction can be set to one of these options: Low, Medium, High or Off .
Advanced Settings	
Dynamic Contrast	You can change the contrast rate by using the dynamic contrast function. Dynamic contrast can be set to one of these options: Low, Medium, High or Off .
Colour Temp	Sets the desired colour tone.
Picture Zoom	Sets the picture size to Auto, 16:9, Subtitle, 14:9, 14:9 Zoom, 4:3 or Cinema. Auto (Only available in Scart mode with SCART PIN8 high voltage/low voltage switching).
HDMI True Black	While watching from a HDMI source, this feature will be visible in the Picture Settings menu. You can use this feature to enhance the blackness in the picture.
Film Mode	Films are recorded at a different number of frames per second to normal television programmes. Turn this feature on when you are watching films to see the fast motion scenes clearly.
Skin Tone	Adjust the desired skin tone.
Colour Shift	Adjust the desired colour tone.
RGB Gain	Press OK button to edit RGB gain. You can configure the colour temperature values using the RGB Gain feature.
Reset	Resets the picture settings to factory default settings.
Autoposition (in PC mode)	Automatically optimizes the display. Press OK to optimize.
H Position (in PC mode)	This item shifts the image horizontally to the right hand side or left hand side of the screen.
V Position (in PC mode)	This item shifts the image vertically towards the top or bottom of the screen.
Dot Clock (in PC mode)	Dot Clock adjustments correct the interference that appear as vertical banding in dot intensive presentations like spreadsheets or paragraphs or text in smaller fonts.
Phase (in PC mode)	Depending on the resolution and scan frequency that you input to the TV set, you may see a hazy or noisy picture on the screen. In such a case you can use this item to get a clear picture by using trial and error.
<i>While in VGA (PC) mode, some items in Picture menu will be unavailable. Instead, VGA mode settings will be added to the Picture Settings while in PC mode.</i>	

Menu Features and Functions

Sound Menu Contents	
Volume	Adjusts the volume level.
Equalizer	In the equalizer menu, the preset can be changed to Music, Movie, Speech, Flat, Classic and User . Press the MENU button to return to the previous menu. <i>Equalizer menu settings can be changed manually only when the Equalizer Mode is in User.</i>
Balance	This setting is used for emphasizing left or right speaker balance.
Headphone	Sets the headphone volume.
Sound Mode	You can select Mono, Stereo, Dual I or Dual II mode, only if the selected channel supports that mode.
AVL	Automatic Volume Limiting (AVL) function sets the sound to obtain a fixed output level between programmes (For instance, volume level of advertisements tend to be louder than programmes).
Headphone/Lineout (optional)	When you connect an external amplifier to your TV using the headphone jack, you can select this option as Lineout. If you have connected headphones to the TV, set this option as Headphone.
Dynamic Bass	Enables or disables the Dynamic Bass.
Surround Sound (optional)	Surround sound mode can be changed as On or Off.
Digital Out	Sets digital audio output type.
Install and Retune Menu Contents	
Automatic Channel Scan (Retune)	Displays automatic tuning options. Digital Aerial: Searches and stores aerial DVB stations. Analogue: Searches and stores analogue stations. Digital Aerial & Analogue: Searches and stores aerial DVB and analogue stations.
Manual Channel Scan	This feature can be used for direct broadcast entry.
Analogue Fine Tune	You can use this setting for fine tuning analogue channels. This feature is not available if no analogue channels are stored.
First Time Installation	Deletes all stored channels and settings, resets TV to factory settings and starts first time installation. You can follow the instructions in the First Time Installations section for more information on this process.
Clear Service List	(*) This setting is visible only when the Country option is set to Denmark, Sweden, Norway or Finland. Use this setting to clear channels stored.

Menu Features and Functions

Settings Menu Contents	
Conditional Access	Controls conditional access modules when available.
Language	Configures language settings.
Parental	Configures parental settings. Default PIN code can change depending on the selected country. If you are asked to enter a PIN code for viewing a menu option, use one of the following codes: 4725, 0000 or 1234.
Timers	Sets timers for selected programmes. (USB Record)
Recording Configuration	Displays the recording configuration menu.
Date/Time	Sets date and time.
Sources	Enables or disables selected source options.
Other Settings: Displays other setting options of the TV set:	
Menu Timeout	Changes timeout duration for menu screens.
Scan Encrypted	When this setting is on, the search process will locate encrypted channels as well. If it is set as Off, encrypted channels will not be located in automatic or manual searches.
Blue Background	Activates or deactivates the blue background system when the signal is weak or absent.
Software Upgrade	To ensure that your TV always has the most up to date firmware. Please ensure that the TV is set to standby mode with an aerial connected to pick up the over air download.
Application Version	Displays application version.
Hard of Hearing	Enables any special feature sent from the broadcaster.
Audio Description	Audio description refers to an additional narration track for blind and visually impaired viewers of visual media, including television and movies. You can use this feature, only if the broadcaster supports the additional narration track.
Auto TV Off	You can set the timeout value of the auto off feature. After the timeout value is reached and the TV has not been operated for a selected time, the TV will go into standby mode.
Standby Search (optional)	If you change Standby Search to Off, this function will be unavailable. To use Standby search please make sure that you select Standby Search as On. If the Standby Search is set to On, when the TV is in standby mode, available broadcasts will be searched. If the TV locates any new or missing broadcasts, a menu screen will be displayed, asking you whether or not to execute these changes. The Channel list will be updated and changed after this process. Please activate the Standby Search setting in order to enable your TV to automatically update the broadcast frequency of the broadcaster, broadcast definition and other similar changes.
Store Mode	If you are displaying the TV in a store, you can activate this mode. Whilst Store Mode is enabled, some items in the TV menu may not be available.
Power Up Mode	Standby: The TV powers up into Standby mode when the TV is plugged into the mains. Last State: The TV powers up into On mode when the TV is plugged into the mains and the last channel/source is selected.

Electronic Programme Guide (EPG)

Some, but not all channels send information about the current and next programmes. Press the **“EPG”** button to view the EPG menu.

Programme Guide		Sat 26/05	Sat 26/05 14:36
	14:00	15:00	16:00
1. BBC ONE	88 Dick 'N' Dom Go Wild	Lockie Leonard	Coppcats
2. BBC TWO	Wanted Down Under	Hairy Bikers' Best of British	Flog It!
3. ITV1	Dickinson's Real Deal	Rosemary and Thyme	
4. Channel 4	The H1 Countdown	Deal or No Deal: Banker's Birthday	
5. Channel 5	Law & Order: By Appointment Only		
6. ITV2	The Jeremy Kyle Show	Planet's Funni	Britain's Got Talent
7. BBC THREE	This Is BBC Three		
9. BBC FOUR	This Is BBC Four		
10. ITV3	Murder, Murder, She Wrote	On the Buses	On the Buses
11. Pick TV	The Biggest Loser USA	Nothing To Declare	Nothing To Declare

Prev day

Next day

Zoom

Filter

Event Details

Select Genre

888 Jump

Options

Search

Now

Rec/Stop

Up/Down/Left/Right: Navigate EPG.

OK: Displays programme options.

INF(I): Displays, in detail, information on the programme selected.

GREEN: Switches to List Schedule EPG.

YELLOW: Switches to Timeline Schedule EPG.

BLUE: displays filtering options.

(RECORD): the TV will start to record the selected programme. You can press again to stop the recording.

IMPORTANT: To record a programme, you should first connect a USB disk to your TV while the TV is switched off. You should then switch on the TV to enable the recording feature. Otherwise, the recording feature will not be available.

Note: Switching to a different broadcast or source is not available during a recording.

Programme Options

In the EPG menu, press the **OK** button to enter the **Event Options** menu.

Select Channel

In the EPG menu, using this option, you can switch to the selected channel.

Record / Delete Record Timer

After you have selected a programme in the EPG menu, press the **OK** button and the **Options** screen will be displayed. Select the **“Record”** option and press the **OK** button. After this operation, a recording will be scheduled for the selected programme.

To cancel an already set recording, highlight that programme and press the **OK** button and select the option **“Delete Rec. Timer”**. The recording will be cancelled.

Set Timer / Delete Timer

After you have selected a programme in the EPG menu, press the **OK** button and the **Options** screen will be displayed. Select the **“Set Timer on Event”** option and press the **OK** button. You can set a timer for future programmes. To cancel an already set timer, highlight that programme and press the **OK** button. Then select **“Delete Timer”** option. The timer will be cancelled.

Note: It is not possible to record two channels at the same time.

Recording a Programme

IMPORTANT: When using a new USB hard disk drive, it is recommended that you first format the disk using your TV's **“Format Disk”** option.

To record a programme, you should first connect a USB disk to your TV while the TV is switched off. You should then switch on the TV to enable the recording feature.

To use the recording function, you need to connect a USB disk or an external hard disk drive to the TV and the connected USB disk should have at least 1GB capacity and should have 2.0 speed compatibility. If the connected USB device does not support 2.0 speed, an error message will be displayed.

Note: Recorded programmes are saved into the connected USB disk. If desired, you can store/copy recordings onto a computer; however, these files will not be available to be played on a computer. You can play the recordings only via your TV.

Note: Lip Sync delay may occur during the timeshifting. Radio recording is not supported. The TV can record programmes up to ten hours.

Recorded programmes are split into 4GB partitions.

If the writing speed of the connected USB disk is not sufficient, the recording may fail and the timeshifting feature may not be available.

Recordings of HD programmes can occupy more space on the USB disk compared to SD programmes. For this reason it is recommended to use a USB hard disk drive to record HD programmes.

Do not unplug the USB/HDD during a recording. This may harm the connected USB/HDD.

Multipartiton support is available. A maximum of two different partitions are supported. If the disk has more than two partitions, a crash may occur. The first partition of the USB disk is used for PVR ready features. It also must be formatted as the primary partition to be used for the PVR ready features.

Some stream packets may not be recorded because of signal problems, so sometimes the video may freeze during playback.

Record, Play, Pause, Display (for PlayListDialog) keys can not be used when teletext is ON. If a recording starts from the timer when teletext is ON, teletext is automatically turned off. Also teletext usage is disabled when there is an ongoing recording or playback.

Timeshift Recording

Press **II** (PAUSE) button while watching a broadcast to activate timeshifting mode. In timeshifting mode, the programme is paused and simultaneously recorded to the connected USB disk. Press **▶** (PLAY) button again to resume the paused programme from where you stopped. You will see the timeshift gap between the real and the timeshifted programme in the info bar.


Instant Recording

Press **●** (RECORD) button to start recording an event instantly while watching a programme. You can press **●** (RECORD) button on the remote control again to record the next event on the EPG. In this case, the OSD will display the programmed events for recording. Press **■** (STOP) button to cancel instant recording.

Note: You can not switch broadcasts or view the Media Browser during the recording mode.

Watching Recorded Programmes

In the main menu, use “◀” or “▶” buttons to select the **Media Browser**. Highlight the **Recordings Library** using “◀” or “▶” button and press the **OK** button to enter the Recordings Library. Select a recorded item from the list (if previously recorded) by using “▼” or “▲” buttons. Press the **OK** button to view the **Play Options**. Select an option by using “▼” or “▲” or **OK** buttons.

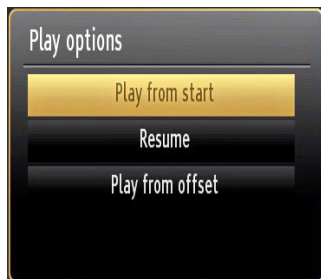

Available playback options:

- Play from start: Plays the recording from the beginning.
- Resume: Resumes Playback from the point at which you stopped playback previously.
- Play from offset: Specifies a playing point.

Note: Viewing main menu and menu items will not be available during the playback.

Press the **■** (STOP) button to stop a playback and return to the Recordings Library.

Slow Forward

If you press **II** (PAUSE) button while watching recorded programmes, the slow forward feature will be available. You can use **▶▶** button to slow forward. Pressing **▶▶** button consecutively will change slow forwarding speed.

Recordings Library

To view the list of recordings, select **"Recordings Library"** and press the **OK** button. The Recordings Library will then be displayed with available recordings. All the recordings are kept in a list in the recordings library.

RED button (Delete) :Erases the selected recording.

GREEN button (Edit): Makes changes on the selected recording.

BLUE button (Sort): Changes the order of the recordings. You can select from a wide range of sorting options.

OK button: Activates the play options menu:

▶ : Resume Playback.

INFO (Details): Displays the programme information details.

Recording Configuration

Select the Recording Configuration item in the Settings menu to configure the recording settings.

Format Disk: You can use the Format Disk feature for formatting the connected USB disk. **IMPORTANT**: Note that **ALL** the data stored on the USB disk will be lost and the disk format will be converted to FAT32 if you activate this feature. If your USB disk malfunctions, you can try formatting the USB disk. In most cases formatting the USB disk will restore normal operation; however, **ALL** the data stored on the USB disk will be lost in such a case.


Note: If "USB is too slow" message is displayed on the screen while starting a recording, try restarting the recording. If you still get the same error, it is possible that your USB disk does not meet the speed requirements. Try connecting another USB disk.

⚠ Product Safety


- Do not drop objects on the product or knock the product forcefully. This may result in an electric shock or fire.
- Do not use your product near a humidifier or kitchen counter. This may result in an electric shock or fire.
- Do not disassemble, repair or modify the product or its parts. Doing so may result in damage to the product or a malfunction.

- Do not spray cleaner directly onto the surface of the product. This may result in discoloration and cracks and may cause the screen display to peel off.
- Do not let water come into contact with the product when cleaning it. Ensure that water does not enter the product. This may result in an electric shock or fire.
- Since the surface of the product is easily scratched, make sure you clean the product with a soft cloth. As the product may be scratched if there is any foreign material on the cloth, make sure to shake off any dust before using it.
- Do not scratch the surface of the display screen with a sharp tool or clean it using chemicals. This may degrade the screen quality.
- Do not apply force to the display screen.
- Do not drop or bend the product.

Digital Teletext

Press the  button. The digital teletext information appears. Operate it with the coloured buttons, cursor buttons and the **OK** button.

The operation method may differ depending on the contents of the digital teletext. Follow the instructions displayed on digital teletext screen.

When the  button is pressed again, the TV returns to television broadcast.

Software Upgrade

Your TV is capable of finding and updating automatically via the Aerial signal.

3.00am search and upgrade mode

While the TV is connected to an aerial signal. If **Automatic scanning** in the **Upgrade Options** menu is enabled, the TV wakes up at 03:00 and searches broadcast channels for new software upgrades. If new software is found and downloaded successfully, the next time the TV powers up, it will have the new software version.

Note. If the TV fails to come on after the upgrade unplug the TV for 2 minutes and plug in again.

Troubleshooting & Tips

Image persistence - ghosting

Please note that ghosting may occur while displaying a persistent image (still or paused image). LCD/LED TVs' image persistence may disappear after a short time. Try turning off the TV for a while. To avoid this, do not leave the screen in still picture mode for extended periods of time.

No power

If your TV has no power, please check the power cord plug is connected to the mains power socket.

Poor picture

1. Have you selected the correct TV system?
2. Is your TV or house aerial located too close to a non-earthed audio equipment or neon lights, etc.?
3. Mountains or high buildings can cause double pictures or ghost images. Sometimes you can improve the picture quality by changing the direction of the aerial. Is the picture or teletext unrecognisable?
4. Check if you have entered the correct channel frequency if you have done manual tuning.
5. Please retune the channels.
6. The picture quality may degrade when two devices are connected to the TV at the same time. In such a case, disconnect one of the devices.

No picture

1. No Picture means that your TV is not receiving a transmission. Have you selected the correct button on the remote control? Try once more. Also make sure the correct input source has been selected.
2. Is the aerial connected properly?

Licence Notifications

"HDMI, the HDMI logo and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC."



Appendix A: PC Input Typical Display Modes

The following table is an illustration of some of the typical video display modes. Your TV supports up to 1920x1200.

Index	Resolution	Frequency
1	640x350	85Hz
2	640x400	70Hz
3	640x400	85Hz
4	640x480	60Hz
5	640x480	66Hz
6	640x480	72Hz
7	640x480	75Hz
8	640x480	85Hz
9	800x600	56Hz
10	800x600	60Hz
11	800x600	70Hz
12	800x600	72Hz
13	800x600	75Hz
14	800x600	85Hz
15	832x624	75Hz
16	1024x768	60Hz
17	1024x768	66Hz
18	1024x768	70Hz
19	1024x768	72Hz
20	1024x768	75Hz
21	1024x768	85Hz
22	1152x864	60Hz
23	1152x864	70Hz
24	1152x864	75Hz
25	1152x864	85Hz
26	1152x870	75Hz
27	1280x768	60Hz
28	1280x768	75Hz
29	1280x768	85Hz
30	1280x960	60Hz
31	1280x960	75Hz
32	1280x960	85Hz
33	1280x1024	60Hz
34	1280x1024	75Hz
35	1280x1024	85Hz
36	1360x768	60Hz
37	1400x1050	60Hz
38	1400x1050	75Hz
39	1400x1050	85Hz
40	1440x900	60Hz
41	1440x900	75Hz
42	1600x1200	60Hz
43	1680x1050	60Hz
44	1920x1080	60Hz
45	1920x1200	60Hz

Appendix B: AV and HDMI Signal Compatibility (Input Signal Types)

Source	Supported Signals		Available
EXT-1 (SCART1)	PAL		O
	NTSC 60		O
	RGB 50/60		O
	SECAM		O
EXT-2 (SCART2)	PAL		O
	NTSC 60		O
	SECAM		O
Side AV	PAL 50/60		O
	NTSC 60		O
	SECAM		O
YPbPr	480I	60Hz	O
	480P	60Hz	O
	576I	50Hz	O
	576P	50Hz	O
	720P	50Hz	O
	720P	60Hz	O
	1080I	50Hz	O
	1080I	60Hz	O
HDMI1 HDMI2 HDMI3 HDMI4	480I	60Hz	O
	480P	60Hz	O
	576I	50Hz	O
	576P	50Hz	O
	720P	50Hz	O
	720P	60Hz	O
	1080I	50Hz	O
	1080I	60Hz	O
	1080P	24Hz 25Hz 30Hz 50Hz 60Hz	O

(X: Not Available, O: Available)

In some cases a signal on the TV may not be displayed properly. The problem may be an inconsistency with standards from the source equipment (DVD, Set-top box, etc.). If you do experience such a problem please contact your dealer and also the manufacturer of the source equipment.

Appendix C: Supported File Formats for USB Media Browser

Media	Extension	Format		Notes
		Video	Audio	
Movie	dat, mpg, mpeg	Mpeg1,2	MPEG1/2 Layer 1/2/3, AAC/HEAAC, AC3/EAC3, LPCM/ADPCM	1080P@ 30fps 50Mbit/sec
	dat, mpg, mpeg	MPEG2 ,H.264, VC1, AVS, MVC	MPEG1/2 Layer 1/2/3, AAC/HEAAC, AC3/EAC3, LPCM/ADPCM	H.264:1080Px2@25fps 1080P@ 50fps MVC: 1080P@ 24fps Other: 1080P@ 30fps" 50Mbit/sec
	.vob	MPEG2	MPEG1/2 Layer 1/2/3, AC3, LPCM	1080P@ 30fps 50Mbit/sec
	.mkv	MPEG1,2,4, XviD, H.264,	MPEG1/2 Layer 1/2/3, AAC/HEAAC, AC3/EAC3, LPCM	H.264:1080Px2@25fps 1080P@ 50fps Other:1080P@ 30fps 50Mbit/sec
	.mp4 .mov	VC1,WMV3, Motion JPEG	MPEG1/2 Layer 3, AAC/HEAAC, AC3/EAC3, LPCM/ADPCM	H.264: 1080Px2@25fps 1080P@ 50fps Other: 1080P@ 30fps 50Mbit/sec
	RMVB, RM	rv30, rv40	LBR(cook), AAC/HEAAC	1080P@ 30fps 50Mbit/sec
	avi	MPEG1,2,4 Xvid H.264, VC1,WMV3, Sorenson H.263 Motion JPEG	MPEG1/2 Layer 1/2/3, AAC/HEAAC, AC3/EAC3, LPCM/ADPCM, WMA	H.264: 1080Px2@25fps 1080P@ 50fps Other: 1080P@ 30fps" 50Mbit/sec
	flv	H.264, Sorenson H.263	MPEG1/2 Layer 3, AAC/HEAAC, LPCM/ADPCM	H.264: 1080Px2@25fps 1080P@ 50fps Other: 1080P@ 30fps" 50Mbit/sec
	3gp,3g2	MPEG4, H.264		1920x1080 @ 30P 20Mbit/sec
	asf, wmv	MPEG2,4, XviD, H.264, VC1,WMV3	MPEG1/2 Layer 1/2/3, AAC/HEAAC, AC3/EAC3, LPCM, WMA	1080P@ 30fps 50Mbit/sec
Music	.mp3	-	MPEG1 Layer 1/2/3 (MP3)	
	.wav		LPCM	
	WMA/ASF		WMA, WMA Pro	
	.m4a/ .aac		AAC, HEAAC	
Photo	.jpg .jpeg	Baseline JPEG		max WxH = 14592x12288 Up to 8 MegaByte
	.png	Progressive JPEG		
	.bmp	non-interlace		
	.png	interlace		
Subtitle	sub	-	-	
	srt	-	-	

Appendix D: Supported DVI Resolutions

When connecting devices to your TV's connectors using DVI converter cable (not supplied), you can refer to the following resolution information.

	24Hz	25Hz	30Hz	50Hz	60Hz
480i					<input checked="" type="checkbox"/>
480p					<input checked="" type="checkbox"/>
576i				<input checked="" type="checkbox"/>	
576p				<input checked="" type="checkbox"/>	
720p				<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
1080i				<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
1080p	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>

SKY Remote Control Code

The Sky Code is 065:

- 1 Turn your TV on.
- 2 Press TV on your Sky remote control handset.
- 3 Hold down **SELECT** and the **RED** button together for about two seconds, until the red light on the Sky remote control blinks twice.
- 4 Key in 065. The light on the Sky remote control should blink twice.
- 5 Press the **STANDBY** button on your Sky remote control. If your TV switches off, press **SELECT**. The light on the Sky remote control blinks twice. Now try the other functions.

Specifications

RF AERIAL INPUT 75 Ohm (unbalanced)

OPERATING VOLTAGE 220-240V AC, 50 Hz.

AUDIO OUTPUT POWER (W_{RMS}) (10% THD) 2 x 6

POWER CONSUMPTION (W)

150 W (max)

PANEL

16:9 display, 32" Screen Size

DxLxH (With foot): 187 x 783 x 556

Weight (Kg): 10.50

DxLxH (Without foot): 94.5 x 783 x 513.5

Weight (Kg): 9.50

Transmission Standards:

VHF (BAND I/III) UHF (BAND U) HYPERBAND

DVB-T, MPEG2,DVB-T, MPEG4 HD



WARRANTY CARD

Thank you for your purchase.

We are sure you will enjoy using Finlux for many years.

The product warranty is for a period of twelve (12) months from the date of original purchase. Any defect caused by faulty materials or workmanship will be repaired free of charge where possible during this period by Finlux. If a repair is not possible, the product will be replaced free of charge or a refund will be given.

This guarantee is subject to the following provisions:

The guarantee does not cover accidental damage, misuse, cabinet parts, knobs or consumable items

- The product must be correctly installed and operated in accordance with the instructions in the manual provided
- The product must be used solely for domestic purposes
- The guarantee will be invalid if the product is re-sold or has been damaged by inexperienced repair.

Specifications are subject to change without notice. On-site service is limited to Vestel 46" Televisions and above.

Repairs

Our authorised service partners will always try to complete any repairs at your home. However, there may be times when the product has to be taken away for further testing. If this happens, you will not be charged for collection or return of the product within the terms of this guarantee.

Disclaimer

The manufacturer disclaims any liability for incidental or consequential damages. This guarantee is in addition to, and does not diminish, your statutory or legal rights.

Customer helpline

In the event of a problem with the product within the guarantee period, please call this number:

Customer Helpline: 0845 459 52 82

FINLUX

Warranty Exclusions

A. This Warranty does not extend to loss caused by normal wear and tear, fire, water (liquid ingress), theft, vermin or insect infestation.

B. This warranty does not cover damage caused by:

- Misuse or abusive use of any Finlux consumer product
- Incorrect operation, or not following the operating instructions (as stated in the Product Instruction Manual)
- Improper installation
- Failure to clean or improper cleaning of the product
- Incorrect voltage or non-authorised electrical connections
- Use of non-authorised/non-standard parts
- Password setting/resetting and virus infection
- Repair or other work carried out on the Finlux consumer product other than by authorised Finlux service personnel.

C. This Warranty does not cover service costs for the replacement and maintenance of consumable parts, which have stopped working through normal wear and tear. This includes, but is not limited to, parts classifiable as a consumable part.

D. This Warranty does not cover any Finlux branded consumer product installed in a moveable dwelling. Note that the performance of the product may be affected if it is installed in a caravan or other such moveable dwelling.

E. This Warranty does not cover Finlux consumer products which do not bear the original manufacturer's factory-applied serial number in its original form (for instance where it or the sticker bearing it has been removed, wiped out, rubbed off, or altered). This applies even if you make a claim while the product is still under Warranty.

F. This Warranty does not cover the loss of any data no matter how the loss is caused. You are responsible for backing up and protecting data against loss, damage or destruction.

The guarantee is only valid when accompanied by proof of purchase. If the serial number is defaced, missing or illegible, the warranty is null and void.

